


## LG-3522U Chroma Key Background

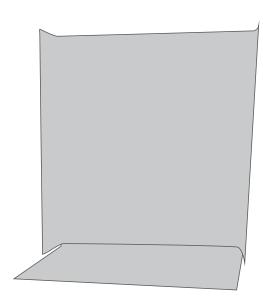



•The background come with accessories together, plc check carefully.

			3 ,1
Name	Quantity	Unit	Remarks
Instruction Sheet	1	PC	
Splice joint	32	PC	Two-way: 16pcs Three-way: 12pcs Corner: 4pcs
Aluminium Tube	38	PC	
Cloth	1	PC	

Add:Zhanglin,324,Dongli Chenghai Shantou Guangdong China Tel:+86-754-85751187 Fax:+86-754-85300887

**Guangdong NanGuang Photo&Video Systems Co.,Ltd** 

E-mail:service@nanlite.com http://www.nanlite.com


Version: V1 2022-10-21

www.nanlite.com

## 


Instant green screen studio, an ideal spot for interview, speech, shoot, virtual studio; quick and convenient for building, can be builded in 10 minutes, light weight, portable, easy to storage; green cloth, simple and clean, high resilience, no crease. Building size: 350 x 60 x 220 CM (WxDxH).

## 2. The installation diagram of CN-3522U background skeleton:

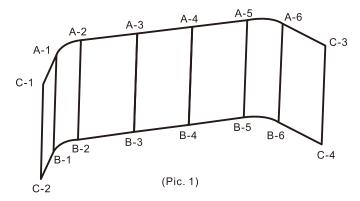


## Steps as below:

① Pick out the unmarked ones from aluminium tubes; by two-way connector(Pic.2) to match each two unmarked tubes (Pic.3) to become the medium tube (as C-1~C-2.A-1~B-1, etc.), every medium tube have 3 parts, totally 8 pcs (Pic.4).

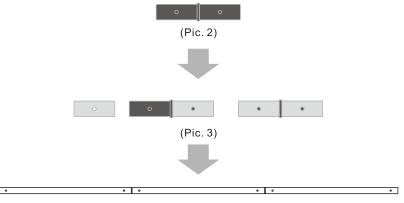


Midium aluminium tube
(Pic. 4)

②. The labelled aluminium tubes are divided by A/B:Aluminum Tube A and Aluminum Tube B. According to pic. 1, joint each two aluminum Tube A/B with the three-way connector(Pic.5), and take the bend tube(Pic.6), then joint the corresponding position on both ends, finish the joint of up and down layer(Pic.7). Next, take the 8 assembled midium aluminum tubes from Step ① to joint the up and down layer with corresponding position. As shown in (pic. 8), the corner connector is for jointing the 4 corners of the background frame, one end is for jointing Aluminum Tube A/B, another end is for jointing Medium Tube, finally finish as (Pic.9).

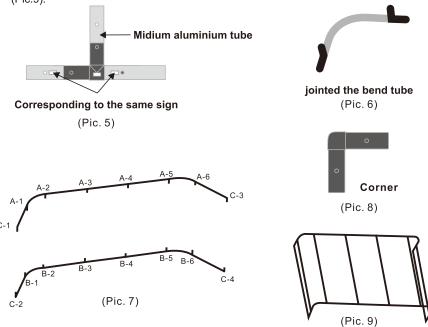

3. Install the background cloth (Pic.10) from the position of the C-3~ C-4 and set up from right to left side (Noted the B area will have one more piece of cloth), after pull to C-1~C-2, using the velcro to complete the installation.

[The background cloth has resilience, if you find the cloth can not be set up, please do some stretch to finish it.]

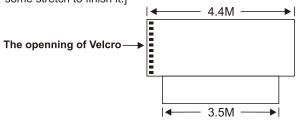

The expanded view of background cloth (Pic. 10)